



Wunderlich[®]
complete your BMW.



Installation Instructions

BMW F800 R Carbon Fiber Rear Wheel Covering. Part number 8160832


Thank you for purchasing this product.

Before beginning the installation, please check to ensure that you have the correct part by comparing the accompanying paperwork with your Motorcycle model. The needed identification number is clearly visible on the underside of your carbon fiber part.

Installation:

Ensure that your motorcycle is situated on solid ground and supported by the center stand or suitable workshop stand.

Remove the original chain guard from your motorcycle. Thereafter, the supplied carbon fiber rear wheel covering can be installed in its place. (Images 1-4)

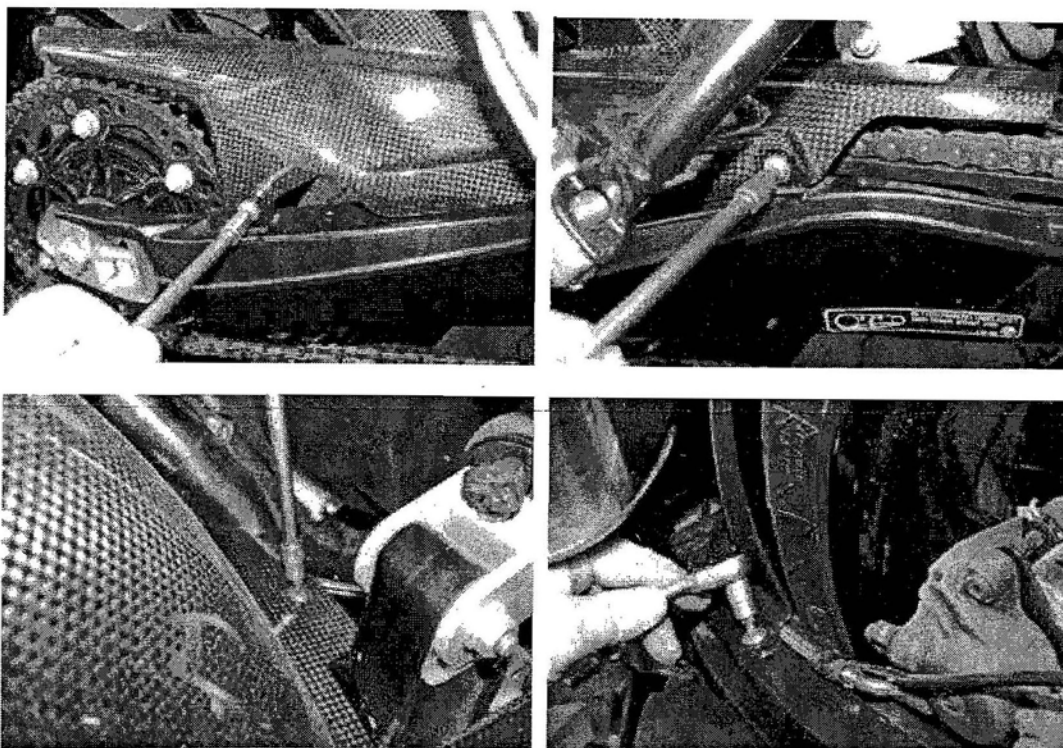

Ensure that there is sufficient clearance to all nearby and moving parts of the motorcycle. In particular, ensure that there is sufficient clearance between the rear tire and the rear wheel covering.

PLEASE NOTE: If you have changed the gearing ratios of your bike, it is possible that the rear wheel is positioned further forward than original and in this instance the clearance may be minimal. Please keep in mind that this part was designed for a bike with stock gearing!

Please tighten all fasteners to the BMW torque specifications.

After successful installation, we wish you a great deal of enjoyment from your carbon fiber part.

General note: These instructions were written or translated to the best of our knowledge, however we make no guarantees regarding completeness or accuracy. Should you encounter difficulty with the installation, please seek advice from your dealer or motorcycle workshop of your choice.